




AceWatchDog™

For Hot-N-Pop and K9 Heat Alarm® Pro

AWD-7040

Install Manual

Install in dry location and follow procedures outlined in the vehicles modifier guide provided by the vehicle manufacture.

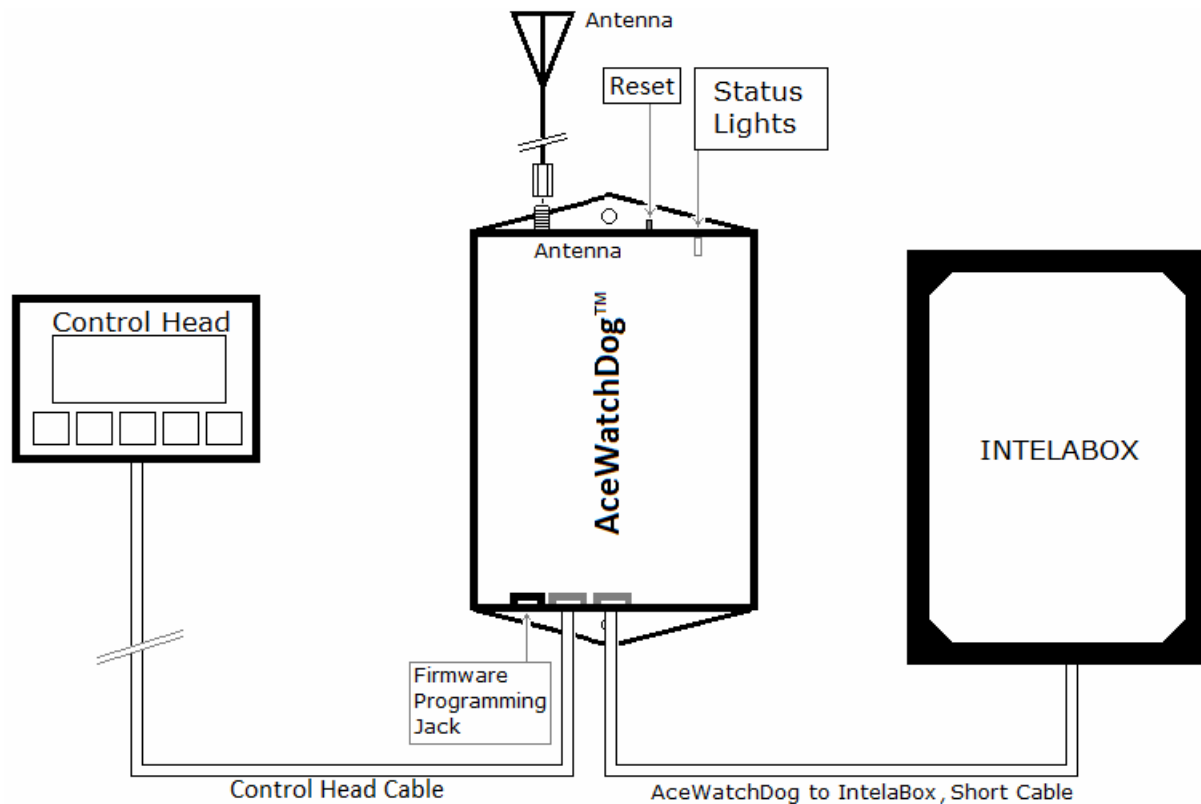

Drawing Not to Scale

Install Steps

- 1) Mount the Antenna (see instructions included with the antenna)
- 2) Mount the AceWatchDog™ unit in a dry location that is accessible to the K9 handler, near the Intelabox is usually a good location
- 3) Unplug the Control Head cable from Intelabox and plug it into either of the silver jacks on the AceWatchDog™ unit.
- 4) Connect the short jumper cable between the other silver jack on the AceWatchDog™ unit and the Intelabox.
(The 4 Pin telco jack (right side) is only used for Firmware Programming)

ATTENTION INSTALLER:

Please record the AceWatchDog™ **Activation Code** _ _ _ _ _

For AceWatchDog™ to function, it must be setup by the K9 Handler Online At
www.AceLogin.com

**The K9 Handler MUST get the AceWatchDog™ User Guide
and ACTIVATION CODE**

AceWatchDog™ Status LEDs Functions

When the final connection is made the heat alarm control head will indicate power is applied; at this point the AceWatchDog's Red, Yellow, and Green will FLASH briefly.

The **Red LED** will stay **ON** indicating that a **message is pending** to be sent. The **Yellow LED** FLASHES as data flows to the **Cell Modem**. It stays ON at 50% brightness when connected to the Internet. Data flashes then occur at 100% brightness.

The **Green LED** FLASHES as data flows from the **IntelaBox**. It stays ON at 50% brightness when IntelaBox data is captured. Data flashes then occur at 100% brightness.

The **Red LED** turns **OFF** when the **pending message is successfully sent**.

To properly shut down the AceWatchDog™, turn OFF the Hot-N-Pop or Heat Alarm Pro and allow the AceWatchDog™ to send the OFF message to the Internet and then power itself down.

Reset Button:

If the AceWatchDog stops working or becomes non-responsive, do the following:

Press the push button near the Green/Yellow/Red LEDs for several seconds until all the LEDs turn off then let go. The unit will restart in a moment.



AceWatchDog™

For Hot-N-Pop and K9 Heat Alarm® Pro

AWD-7040

Install Manual